



SpeedMaster™

SPEED SWITCH SENSOR
& SYSTEM TESTING DEVICE



Patent Numbers -
US8947073
MX321802
EP26223568

OPERATION MANUAL

Part No's. SM2 (SpeedMaster) & PP2 (Pulse Pilot)

www.go4b.com/usa



TABLE OF CONTENTS

CUSTOMER SAFETY RESPONSIBILITIES	Page 4 - 5
PRODUCT OVERVIEW	Page 6
SPECIFICATIONS	Page 7
DIMENSIONS	Page 7
TESTER OPERATION	Page 8
BUTTON FUNCTIONS	Page 9
TROUBLESHOOTING GUIDE	Page 10
PRODUCT WARRANTY	Page 11

Dear 4B Customer:

Congratulations on your purchase. 4B appreciates your business and is pleased you have chosen our products to meet your needs.

Please read in its entirety and understand the literature accompanying the product before you place the product into service. Please read the safety precautions carefully before operating the product. With each product you purchase from 4B, there are some basic but important safety considerations you must follow to be sure your purchase is permitted to perform its design function and operate properly and safely, giving you many years of reliable service. Please read and understand the Customer Safety Responsibilities listed below. Failure to follow this safety directive and the Operation Manuals and other material furnished or referenced, may result in serious injury or death.

SAFETY NOTICE TO OUR CUSTOMERS

- A. In order to maximize efficiency and safety, selecting the right equipment for each operation is vital. The proper installation of the equipment, and regular maintenance and inspection is equally important in continuing the proper operation and safety of the product. The proper installation and maintenance of all our products is the responsibility of the user unless you have asked 4B to perform these tasks.
- B. All installation and wiring must be in accordance with Local and National Electrical Codes and other standards applicable to your industry. (Please see the article “Hazard Monitoring Equipment Selection, Installation and Maintenance” at www.go4b.com.) The installation of the wiring should be undertaken by an experienced and qualified professional electrician. Failure to correctly wire any product and/or machinery can result in the product or machine failing to operate as intended, and can defeat its design function.
- C. Periodic inspection by a qualified person will help assure your 4B product is performing properly. 4B recommends a documented inspection at least annually and more frequently under high use conditions.
- D. Please see the last page of this manual for all warranty information regarding this product.

CUSTOMER SAFETY RESPONSIBILITIES

1. READ ALL LITERATURE PROVIDED WITH YOUR PRODUCT

Please read all user, instruction and safety manuals to ensure that you understand your product operation and are able to safely and effectively use this product.

2. YOU BEST UNDERSTAND YOUR NEEDS

Every customer and operation is unique, and only you best know the specific needs and capabilities of your operation. Please call the 24-hour hotline at 309-698-5611 for assistance with any questions about the performance of products purchased from 4B. 4B is happy to discuss product performance with you at any time.

3. SELECT A QUALIFIED AND COMPETENT INSTALLER

Correct installation of the product is important for safety and performance. If you have not asked 4B to perform the installation of the unit on your behalf, it is critical for the safety of your operation and those who may perform work on your operation that you select a qualified and competent electrical installer to undertake the installation. The product must be installed properly to perform its designed functions. The installer should be qualified, trained, and competent to perform the installation in accordance with Local and National Electrical Codes, all relevant OSHA Regulations, as well as any of your own standards and preventive maintenance requirements, and other product installation information supplied with the product. You should be prepared to provide the installer with all necessary installation information to assist in the installation.

4. ESTABLISH AND FOLLOW A REGULAR MAINTENANCE AND INSPECTION SCHEDULE FOR YOUR 4B PRODUCTS

You should develop a proper maintenance and inspection program to confirm that your system is in good working order at all times. You will be in the best position to determine the appropriate frequency for inspection. Many different factors known to the user will assist you in deciding the frequency of inspection. These factors may include but are not limited to weather conditions; construction work at the facility; hours of operation; animal or insect infestation; and the real-world experience of knowing how your employees perform their jobs. The personnel or person you select to install, operate, maintain, inspect or perform any work whatsoever, should be trained and qualified to perform these important functions. Complete and accurate records of the maintenance and inspection process should be created and retained by you at all times.

5. RETAIN AND REFER TO THE OPERATION MANUAL FOR 4B'S SUGGESTED MAINTENANCE AND INSPECTION RECOMMENDATIONS

As all operations are different, please understand that your specific operation may require additional adjustments in the maintenance and inspection process essential to permit the monitoring device to perform its intended function. Retain the Operation Manual and other important maintenance and service documents provided by 4B and have them readily available for people servicing your 4B equipment. Should you have any questions, please call the free 24-hour hotline number (309-698-5611).

6. SERVICE REQUEST

If you have questions or comments about the operation of your unit or require the unit to be serviced please contact the 4B location who supplied the product or send your request via fax (309-698-5615) or call us via our 24-hour hotline number in the USA (309-698-5611). Please have available product part numbers, serial numbers, and approximate date of installation. In order to assist you, after the product has been placed into service, complete the online product registration section which is accessed via our website www.go4b.com/usa.

WARNING

- Do NOT use when hazardous dust is present!

NOTE

When purchased, the SpeedMaster™ has four AA batteries pre-installed with a pull tab to prevent battery discharge. To activate the batteries, remove the pull tab from the battery tray.

The battery tray is located on the back of the unit. Remove the two screws holding the battery cover and pull the tab.

PRODUCT OVERVIEW

The SpeedMaster™ with Pulse Pilot provides independent, real time, and complete verification of an entire speed monitoring system to ensure that alarms and shutdowns are working as expected.

The SpeedMaster™ operates in two modes. Input mode is used to measure the pulse rate at normal speed. Output mode will allow the user to input pulses to the sensor for testing purposes.

The Pulse Pilot fits in the gap between the sensor and cover on the Whirligig® (Image A). The Pulse Pilot will have no effect on the operation of the speed switch until it is connected to the SpeedMaster™ and set to output mode.

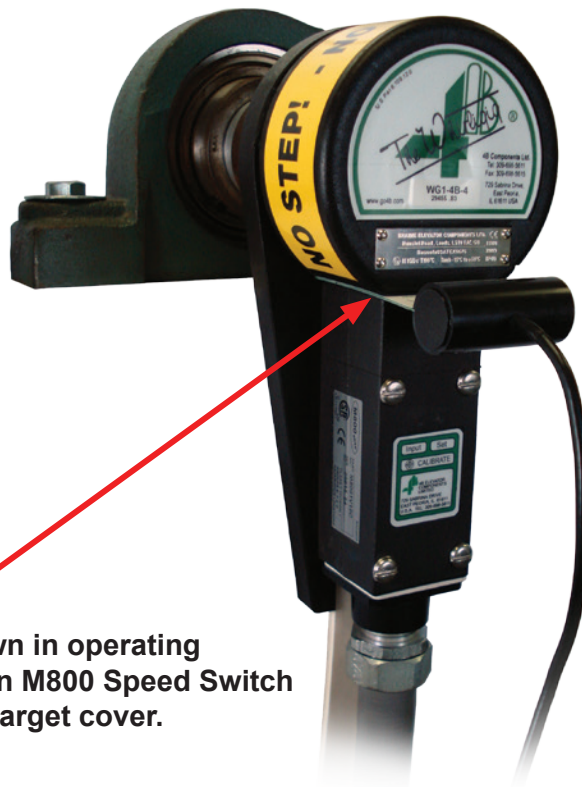


Image A - Pulse Pilot shown in operating position between M800 Speed Switch and Whirligig® target cover.

DANGER


When using the 4B Whirligig speed monitoring accessory the Pulse Pilot can generally be hand held even when the monitored shaft is rotating. However all applications are different and great care should be taken with regard to personal safety.

If a target system supplied by third parties is being used, the Pulse Pilot must not be hand held. The shaft should be stopped and locked out. The Pulse Pilot should then be attached firmly but temporarily (non-metallic industrial adhesive tape may be used). Guards should be reattached and then the system can be restarted.

SPECIFICATIONS

Supply -	4 AA alkaline batteries (included - see notice on page 6) - 6 VDC
Control -	Push button
Input Mode Indication -	Red LED
Output Mode Indication -	Green LED
Display -	Yellow OLED (shaft speed / pluses per minute - PPM)
Power On -	Plug in Pulse Pilot (top of unit) and press power button
Power Off -	Unit powers off automatically if no buttons are pressed for 5 minutes. Unit can be turned off manually by pressing the power button.

DIMENSIONS

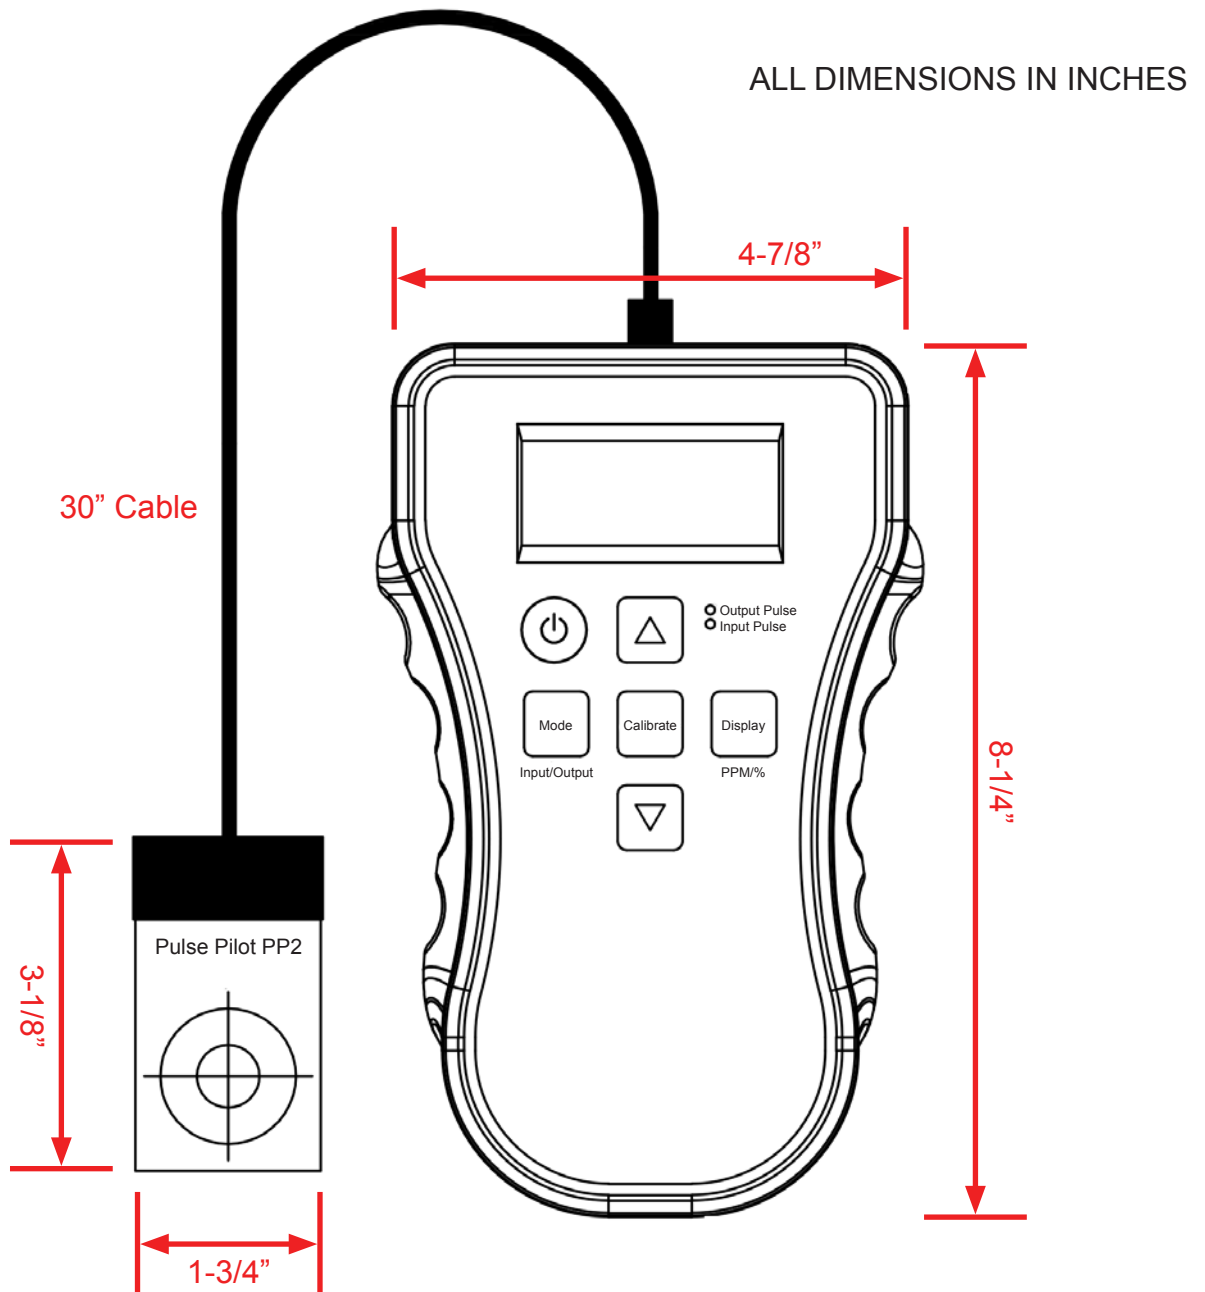

NOTE

Underspeed testing should only be performed when the machine is running at normal operating speed with no material present, and the belt is NOT slipping.

TESTER OPERATION



- Step 1.** Plug the Pulse Pilot into the top of the *SpeedMaster*[™] and press the power button, the OLED display will illuminate.
- Step 2.** Place the Pulse Pilot between the speed sensor and target (Image A). The *SpeedMaster*[™] is now in input mode and the input pulse light will flash each time a target is detected. The display will show speed in pulses per minute (PPM). The Whirligig® can have 1, 2, 4, or 8 pulses resulting in a measured speed of 1, 2, 4, or 8 times the shaft's rpm, respectively.
- Step 3.** Press the "Calibrate" button, this will set the *SpeedMaster*[™] to the measured shaft speed.
- Step 4.** Press the "Mode" button, the output light will flash and the calibrated pulse rate will be fed to the sensor.

At this point, the input speed can be artificially raised or lowered by 1% each time the up or down buttons are pressed. By pressing and holding down the buttons, the input speed will be artificially raised or lowered continuously by 2% increments. Pressing the "PPM / %" display button will toggle between speed or percentage of calibrated speed.



The system should alarm/shut down when the underspeed trip point is reached.

⚠ WARNING

If the system does not immediately shutdown as expected or alarm as required, then remove the machine from service until the problem has been diagnosed and corrected.

 	⚠ WARNING
	Rotating parts can crush, cut and entangle. Do NOT operate with guard removed. Lockout power before removing guard or servicing.

BUTTON FUNCTIONS

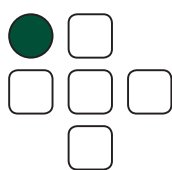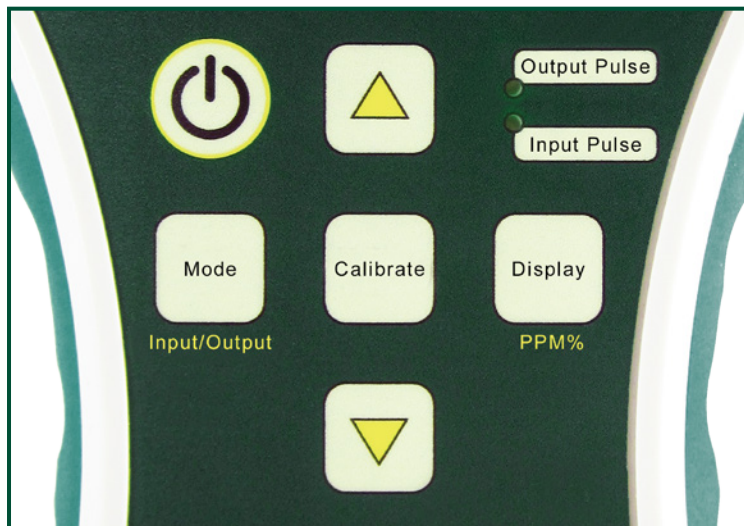

Power - Press once when Pulse Pilot is connected to power on, press again to power off.

	INPUT MODE	OUTPUT MODE
	Press to toggle between Output and Input modes	Press to toggle between Input and Output modes
	Calibrates the <i>SpeedMaster</i> to the measured speed	Returns the output speed to 100%
	No function	Each single press increases speed by 1%. Pressing and holding continuously increases the speed by 2% increments.
	No function	Each single press reduces speed by 1%. Pressing and holding continuously reduces the speed by 2% increments.
	No function	Toggles between speed displayed in pulses per minute (PPM) and % of calibrated speed.

TROUBLESHOOTING GUIDE

FAULT	REMEDY
OLED Display Reads “Connect Sensor” or “Connect Adaptor”	<ol style="list-style-type: none"> 1. Connect Pulse Pilot to the <i>SpeedMaster</i>. 2. Ensure Pulse Pilot does not have a loose connection to the <i>SpeedMaster</i>.
OLED Display not Functioning	<ol style="list-style-type: none"> 1. Replace batteries. 2. If using for the first time, remove protective pull tab from batteries.
Sensor not Responding as Expected to Testing	<ol style="list-style-type: none"> 1. Make sure the Pulse Pilot is securely inserted between the sensor and the Whirligig (See Image A). 2. If equipment shuts down prematurely, ensure equipment is functioning correctly. For example: on a bucket elevator, check for belt slippage. 3. If equipment has a delay or does not shut down, check sensor calibration. If sensor is still not responding as expected, contact 4B.

PRODUCT WARRANTY

1. EXCLUSIVE WRITTEN LIMITED WARRANTY

ALL PRODUCTS SOLD ARE WARRANTED BY THE COMPANY (4B COMPONENTS LIMITED, (4B) BRAIME ELEVATOR COMPONENTS LIMITED, AND (4B) S.E.T.E.M. Srl) HEREIN AFTER REFERRED TO AS 4B TO THE ORIGINAL PURCHASER AGAINST DEFECTS IN WORKMANSHIP OR MATERIALS UNDER NORMAL USE FOR ONE (1) YEAR AFTER DATE OF PURCHASE FROM 4B. ANY PRODUCT DETERMINED BY 4B AT ITS SOLE DISCRETION TO BE DEFECTIVE IN MATERIAL OR WORKMANSHIP AND RETURNED TO A 4B BRANCH OR AUTHORIZED SERVICE LOCATION, AS 4B DESIGNATES, SHIPPING COSTS PREPAID, WILL BE, AS THE EXCLUSIVE REMEDY, REPAIRED OR REPLACED AT 4B'S OPTION.

2. DISCLAIMER OF IMPLIED WARRANTY

NO WARRANTY OR AFFIRMATION OF FACT, EXPRESSED OR IMPLIED, OTHER THAN AS SET FORTH IN THE EXCLUSIVE WRITTEN LIMITED WARRANTY STATEMENT ABOVE IS MADE OR AUTHORIZED BY 4B. 4B SPECIFICALLY DISCLAIMS ANY LIABILITY FOR PRODUCT DEFECT CLAIMS THAT ARE DUE TO PRODUCT MISUSE, ABUSE OR MISAPPLICATIONS, AS AUTHORIZED BY LAW, 4B SPECIFICALLY DISCLAIMS ALL WARRANTIES THAT THE PRODUCT IS FIT OR MERCHANTABLE FOR A PARTICULAR PURPOSE.

3. NO WARRANTY "BY SAMPLE OR EXAMPLE"

ALTHOUGH 4B HAS USED REASONABLE EFFORTS TO ACCURATELY ILLUSTRATE AND DESCRIBE THE PRODUCTS IN ITS CATALOGS, LITERATURE, AND WEBSITES, SUCH ILLUSTRATIONS AND DESCRIPTIONS ARE FOR THE SOLE PURPOSE OF PRODUCT IDENTIFICATION AND DO NOT EXPRESS OR IMPLY A WARRANTY AFFIRMATION OF FACT, OF ANY KIND OR A WARRANTY OR AFFIRMATION OF FACT THAT THE PRODUCTS WILL CONFORM TO THEIR RESPECTIVE ILLUSTRATIONS OR DESCRIPTIONS. 4B EXPRESSLY DISCLAIMS ANY WARRANTY OR AFFIRMATION OF FACT, EXPRESSED OR IMPLIED, OTHER THAN AS SET FORTH IN THE EXCLUSIVE WRITTEN LIMITED WARRANTY STATEMENT ABOVE, INCLUDING, WITHOUT LIMITATION, THE IMPLIED WARRANTIES OF MERCHANTABILITY AND FITNESS FOR A PARTICULAR PURPOSE.

4. LIMITATION OF DAMAGES

ANY LIABILITY FOR CONSEQUENTIAL, INCIDENTAL, SPECIAL, EXEMPLARY, OR PUNITIVE DAMAGES, OR FOR LOSS OF PROFIT WHETHER DIRECT OR INDIRECT, IS EXPRESSLY DISCLAIMED.

With subsidiaries in North America, Europe, Asia, Africa and Australia along with a worldwide network of distributors, 4B can provide practical solutions for all your applications no matter the location.



4B BRAIME ELEVATOR COMPONENTS

Hunslet Road
Leeds LS10 1JZ
UK
Tel: +44 (0) 113 246 1800
Fax: +44 (0) 113 243 5021

4B DEUTSCHLAND

9 Route de Corbie
Lamotte Warfusee
F-8080
France
Tel: +49 (0) 700 2242 4091
Fax: +49 (0) 700 2242 3733

4B ASIA PACIFIC

Build No.899/1 Moo 20, Soi Chongsiri,
Bangplee-Tam Ru Road, Tanbon
Bangpleeyai, Amphur Bangplee,
Samutprakarn 10540
Thailand
Tel: +66 (0) 2 173-4339
Fax: +66 (0) 2 173-4338

4B COMPONENTS LTD.

625 Erie Ave.
Morton, IL 61550
USA
Tel: 309-698-5611
Fax: 309-698-5615

4B SETEM SARL

9 Route de Corbie
80800 Lamotte Warfusee
France
Tel: +33 (0) 3 22 42 32 26
Fax: +33 (0) 3 22 42 37 33

4B AFRICA

PO Box 1489
Jukskei Park
2153 Johannesburg
South Africa
Tel: +27 (0) 11 708 6114
Fax: +27 (0) 11 708 1654

4B AUSTRALIA

Unit 1-18 Overlord Place
Acacia Ridge
Queensland 4110
Australia
Tel: +61 (0) 7 3711 2565
Fax: +61 (0) 7 3711 2574

www.go4b.com